



Debinder

| The debinder prepares the part.

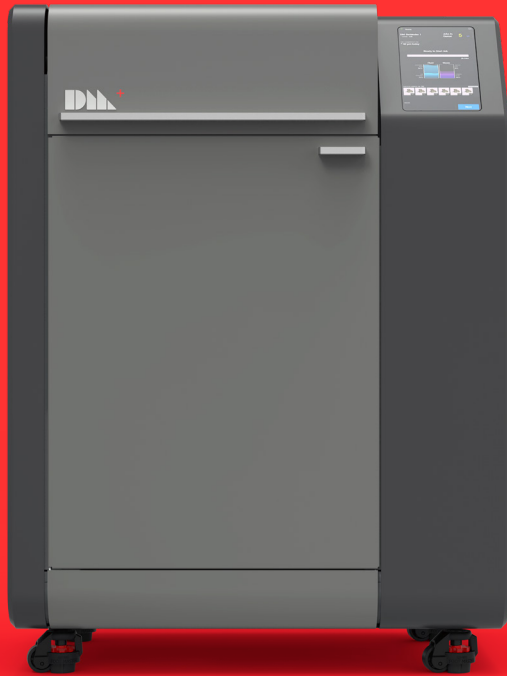

I Debinder

The debinder immerses the green part in fluid to remove primary binder and prepare the part for sintering. With a low emission design, it requires no external ventilation and is safe for an office environment. Automatic fluid distillation and recycling means there is no need to refill between each cycle.

A stainless steel basket with adjustable, multi-level trays enables batch processing of green parts for process efficiency.

Footprint

h 102 w 74 x d 57 cm
40 x 29 x 23 in

Workload envelope

30 x 20 x 20 cm
12 x 8 x 8 in

Max fluid volume (process tank)

17.4 L
4.6 gal

Fluid management

Automatic distillation and recycling

Workholding

Stainless steel holder with adjustable trays

Vapor management

Low emission design—no external ventilation required

Onboard control

- 7" touchscreen display
- Integrated with Fabricate™ software

Additional features

- Vapor- and odor-tight processing tank
- Removable binder trap
- Single-chamber part drying